



CodeWarrior for HC12 v4.6 Installation Procedures for Windows Vista Business

This is the installation procedure for CodeWarrior for HC12 V4.6 on Windows Vista Business. By deselecting the P&E drivers, which are currently not supported and do not work under Windows Vista, a user can proceed with installation and use of the SofTec and Turbo BDM Light drivers.


IMPORTANT:

Certain silicon releases (eg: M68HC812A4) are not supported by the SofTec and Turbo BDM Light drivers so simply being able to install is not a guarantee that all silicon can be targeted using these drivers.

These instructions apply to the 32-bit variant of Windows Vista Business. 64-bit is completely untested and unsupported at the time that this document was written.

Steps to Install:


1. Launch the Installer

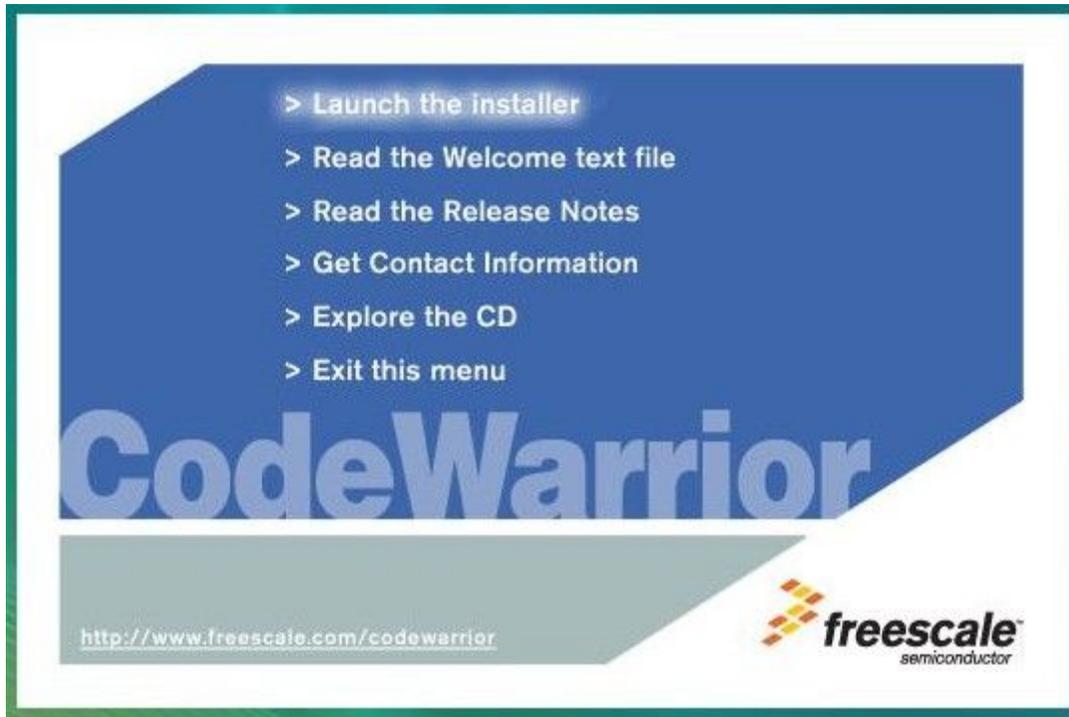


2. Select Custom install



3. Expand the "Program Files -> debugger -> drivers" group and right-click on P&E.

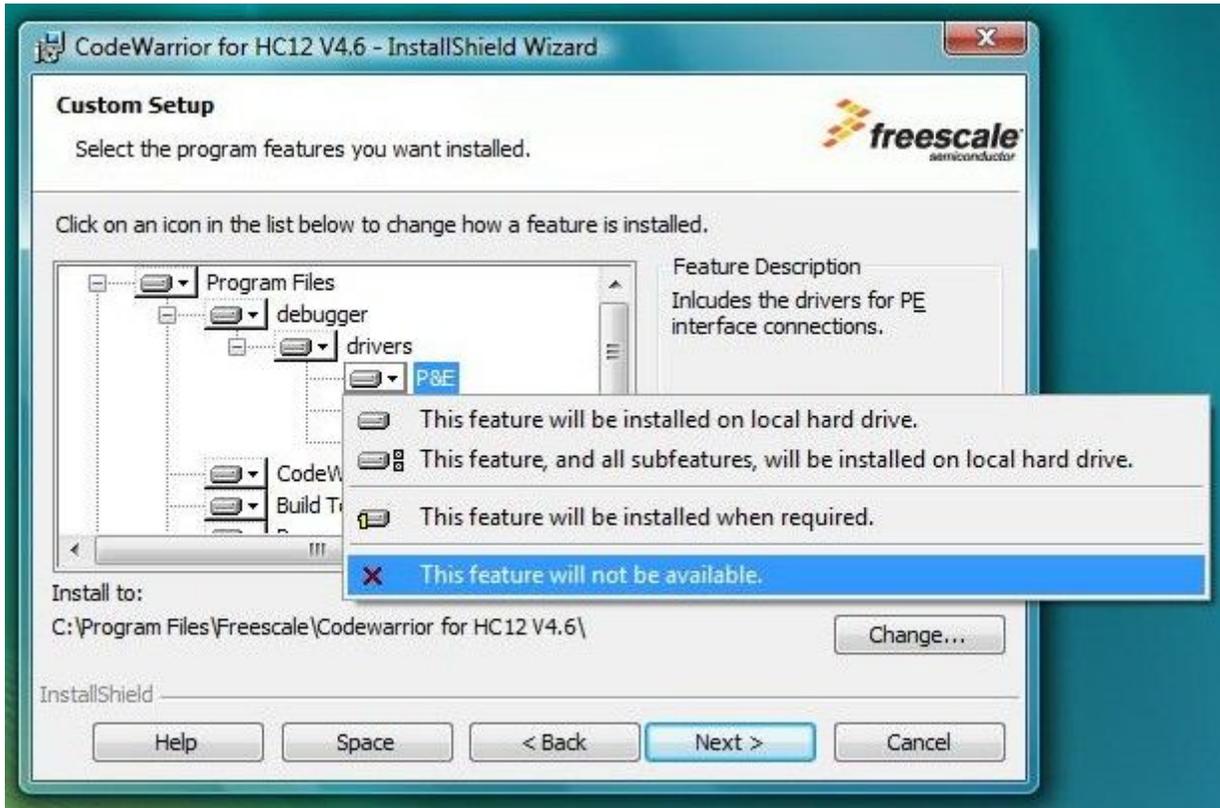

4. Select "This feature will not be available" and click the "Next" button.

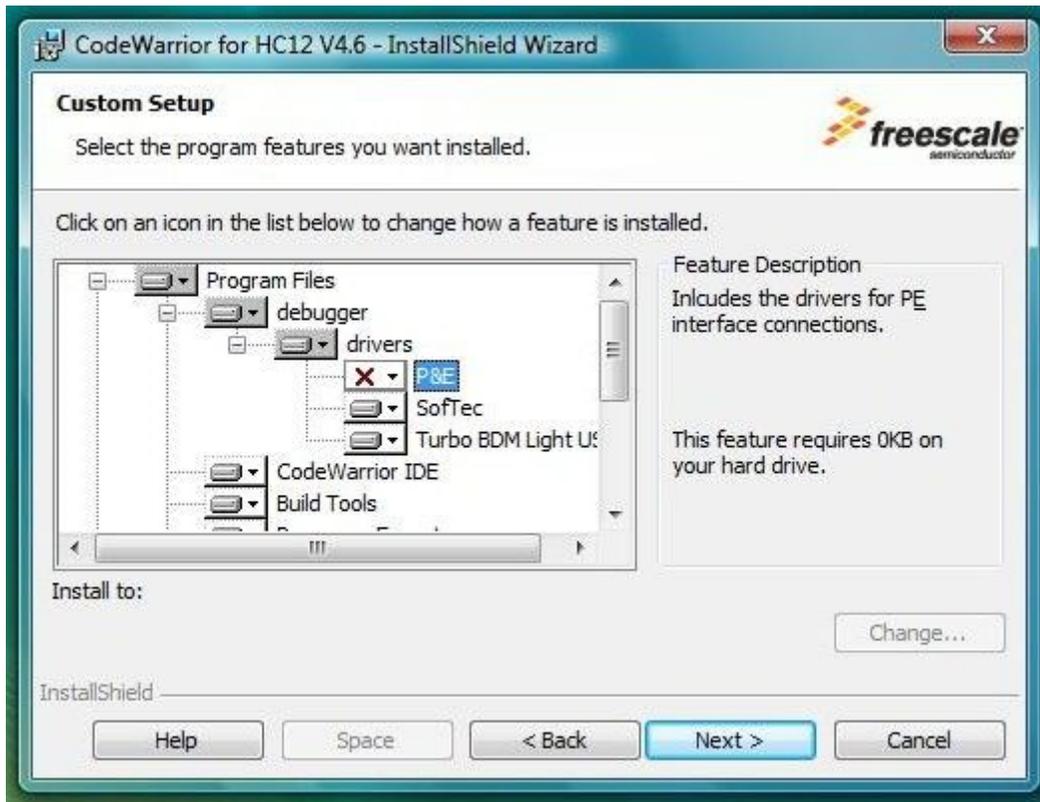


5. After the product has finished installing, plug in the SofTec In-Dart One using the supplied USB cable. Vista will prompt you to install the driver. Choose "Locate and Install driver software"



6. Windows will report that it can't verify the publisher of the driver. Choose "Install this driver software anyway"



7. Congratulations. You are now ready to debug with the In-Dart One.

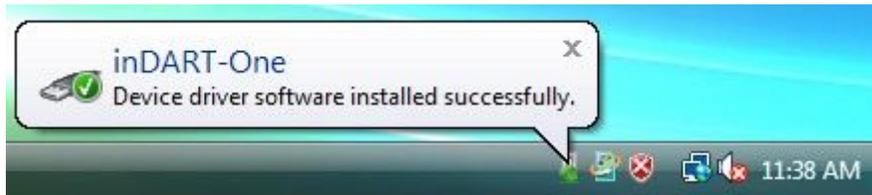

Questions or comments?

Please visit the link below to enter a service request on Freescale's website:

https://www.freescale.com/webapp/servicerequest.create_SR.framework